User Guide 6623-2212

# MRD-405



Industrial M2M/4G Gateway/Router GSM / GPRS / EDGE / HSDPA / HSUPA / HSPA/ 4G LTE

www.westermo.com

### Legal information

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy and reliability or contents of this document. Westermo reserves the right to revise this document or withdraw it at any time without prior notice.

Under no circumstances shall Westermo be responsible for any loss of data or income or any special, incidental, and consequential or indirect damages howsoever caused. More information about Westermo can be found at the following Internet address: http://www.westermo.com

### **Safety**



### Before using this unit:

Read this manual completely and gather all information on the unit. Make sure that you understand it fully. Check that your application does not exceed the safe operating specifications for this unit.

Hazardous voltages may occur within this unit when connected to a power supply.

Prevent access to hazardous voltages by disconnecting the unit from its power supply.

Prevent damage to internal electronics from electrostatic discharges (ESD) by discharging your body to a grounding point (e.g. use of wrist strap).



### Before installation:

This unit should only be installed by qualified personnel.

This unit should be built-in to an apparatus cabinet, or similar, where access is restricted to service personnel only.

The power supply wiring must be sufficiently fused, and if necessary it must be possible to disconnect manually from the power supply. Ensure compliance to national installation regulations.

This unit uses convection cooling. To avoid obstructing the airflow around the unit, follow the spacing recommendations (see Installation section).

### Care recommendations

Follow the care recommendations below to maintain full operation of unit and to fulfil the warranty obligations.

This unit must not be operated with covers or lids removed.

Do not attempt to disassemble the unit. There are no user serviceable parts inside.

Do not drop, knock or shake the unit, rough handling beyond the specification may cause damage to internal circuit boards.

Do not use harsh chemicals, cleaning solvents or strong detergents to clean the unit.

Do not paint the unit. Paint can clog the unit and prevent proper operation.

Do not expose the unit to any kind of liquids (rain, beverages, etc). The unit is not waterproof. Keep the unit within the specified humidity levels.

Do not use or store the unit in dusty, dirty areas, connectors as well as other mechanical part may be damaged.

If the unit is not working properly, contact the place of purchase, nearest Westermo distributor office or Westermo Tech support.

### **GSM** specific safety

Please read and follow the guidelines listed below. The precautions must be observed during all phases of the operation. Breaking these rules may be dangerous, illegal or affect performance of the unit and/or invalidate the unit's approval and/or warranty.

#### General

Remember to follow any special regulations and warnings in force in any area and never use the unit whenever it's forbidden to use it. Do not use the unit when it may cause interference or danger. A wireless device exposed to interference above specified limits could result in deteriorated performance.

### Hospitals or other Medical environment

Do not use the unit in a medical environment such as health care facilities. Follow any regulations or rules that instruct you to not use the unit.

#### **Pacemakers**

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between cellular wireless equipment and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of-Wireless Technology Research.

### Persons with pacemakers:

- **Should ALWAYS** keep the the unit and its antenna more than six inches from their pacemaker when the unit is turned ON.
- iii If you have any reason to suspect that interference is taking place, turn your wireless equipment OFF immediately.

### Hearing Aids

Some digital wireless equipment may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider [or call the customer service line to discuss alternatives.]

#### Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy.-Your physician may be able to assist you in obtaining this information.

Turn the wireless equipment OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

#### **Aircraft**

Do not use the unit in an aircraft. The use of a wireless unit in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless network, and may be illegal.

Failure to observe these instructions may lead to suspension or denial of cellular services to the offender, legal action, or both.

#### Vehicle

If the unit is incorrectly installed in a vehicular environment, the operation of the unit could interfere with the vehicle electronics. Faulty installation and/or operation can constitute a safety hazard.

### For Vehicles equipped with an airbag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

### **Blasting** areas

Do not use the unit where blasting is in progress or in "blasting areas". Observe restrictions and follow any regulation or rules.

### **Explosive atmospheres**

Do not use the unit in any area with a potentially explosive atmosphere. Potentially explosive areas are often, but not always, clearly marked. They include fuelling areas such as petrol stations, below decks on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powder.

### RF energy

The unit is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from the wireless unit. All radio-transmitting devices send signals, which may cause interference in different electronic devices. To avoid interference, place the units antenna a sufficiently long distance from other electronics.

### **Critical applications**

Cellular units operate using radio signals and cellular networks cannot be guaranteed to connect in all conditions. Therefore you should never rely solely on a wireless device for essential communications, for example medical emergencies.

#### **Backup copies**

Remember to make backup copies of all important data, for example PIN/PUK codes, contents of SIM card etc.

### Antenna care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the unit and may violate current regulations.

Do not touch the antenna unnecessarily when the unit is in use. Contact with the antenna affects call quality and may cause the unit to operate at a higher power level than otherwise needed.

#### **Maintenance**

No maintenance is required, as long as the unit is used as intended within the specified conditions.

6623-2212 5

## Agency approvals and standards compliance

Туре		Approval/Compliance		
	Article 3.1a	EN 60950-1	Safety	
		EN 50385	EMF exposure	
	Article 3.1b	EN 301 489-1	ERM/EMC	
		EN 301 489-7	ERM/EMC GSM	
R&TTE		EN 301 489-24	ERM/EMC 3G	
	Article 3.2	EN 301 908-1	ERM 3G	
		EN 301 908-2	ERM 3G	
		EN 301 511	GSM	
		EN 301 908-13 (LTE)	GSM	
Safety		IEC/EN 60950-1, IT equip	pment	

### **Declaration of Conformity, MRD-405**



Westermo Teleindustri AB

### **Declaration of Conformity**

The manufacturer Westermo Teleindustri AB

SE-640 40 Stora Sundby, Sweden

### Herewith declares that the product(s)

Type of product	Model	Art no
4G Cellular Modem / Router	MRD-405	3623-0501

is in conformity with the following EU directive(s).

No	Short name
2014/30/EU Low Voltage Directive (LVD)	
1999/5/EC	R&TTE Radio and Telecommunications Terminal Equipment
2011/65/EU Restriction of the use of certain hazardous substances in electrical and electronic ed (RoHS)	

References of standards applied for this EU declaration of conformity.

No	Title	Issue
EN 50385	Product standard to demonstrate the compliance of radio base stations and fixed	2002
	terminal stations for wireless telecommunication systems with the basic	
	restrictions or the reference levels related to human exposure to radio frequency	
	electromagnetic fields (110 MHz - 40 GHz) - General public	
EN 50581	Technical documentation for the assessment of electrical and electronic products	2012
	with respect to the restriction of hazardous substances	
EN 60950-1	Information technology equipment. Safety. General requirements	2006
		+A11:2009
		+A1:2010
		+A12:2011
EN 301 489-1	Electromagnetic compatibility and radio spectrum matters (ERM);	2012 (V1.9.2)
EN 301 489-7	Electromagnetic compatibility (EMC) standard for radio equipment and services	2006 (V1.3.1)
EN 301 489-24	Part 1: Common technical requirements	2010 (V1.5.1)
	Part 7: Specific conditions for mobile and portable radio and ancillary equipment	
	of digital cellular radio telecommunications systems (GSM and DCS)	
	Part 24: Specific conditions for IMT-2000 CDMA Direct Spread (UTRA) for	
	Mobile and portable (UE) radio and ancillary equipment	
EN 301 511	Global system for mobile communications (GSM); Harmonized standard for	2003 (V9.0.2)
	mobile stations in the GSM 900 and DCS 1800 bands covering essential	
	requirements under Article 3(2) of the R&TTE Directive (1999/5/EC)	
EN 301 908-1	IMT cellular networks; Harmonized EN covering the essential requirements of	2013 (V6.2.1)
EN 301 908-2	article 3.2 of the R&TTE Directive;	2014 (V6.2.1)
EN 301 908-13	Part 1: Introduction and common requirements	
	Part 2: CDMA Direct Spread (UTRA FDD) User Equipment (UE)	
	Part 13: Evolved Universal Terrestrial Radio Access (E-UTRA)	
	User equipment (UE)	

Signature

Pierre Öberg Technical Manager 22<sup>nd</sup> February 2017

 
 Postadress/Postal address
 Tel.
 Telefax
 Postgiro
 Bankgiro
 Org.nr/ Corp. identity number
 Registered office

 S-640 40 Stora Sundby
 016-428000
 016-428001
 52 72 79-4
 5671-5550
 556361-2604
 Eskilstuna

 Sweden
 Int+46 16428000
 Int+46 16428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-428001
 110-4280

## Type tests and environmental conditions

Phenomena	Test	Description	Test levels
ESD	EN 61000-4-2	Enclosure contact	± 6 kV (crit A)*
		Enclosure air	± 8 kV (crit A)*
RF field AM modulated	F field AM modulated IEC 61000-4-3		10 V/m (crit A)* (80 – 2700 MHz)
Fast transient	EN 61000-4-4	Signal ports	± 1 kV (crit A)*
		Power ports	± 2 kV (crit A)*
Surge	EN 61000-4-5	Ethernet ports	± 1 kV (direct) (crit B)*
		Power ports	± 0.5 kV (line to earth) (crit A)*
			± 0.5 kV (line to line) (crit A)*
RF conducted	EN 61000-4-6	All ports	10 V/m, (crit A) * (0.15 – 80 MHz)
Radiated emission	CISPR 16-2-3 ANSI C63.4 (FCC part 15)	Enclosure	Class B
Conducted emission	CISPR 16-2-1	DC power ports	Class B
		Ethernet ports	Class B
Temperature	EN 60068-2-1 EN 60068-2-2	Operating	-40 to +70°C
		Storage & Transport	-40 to +85°C
Humidity	EN 60068-2-30	Operating	0 to 95% relative humidity non condensing.
		Storage & Transport	0 to 95% relative humidity non condensing.
Altitude		Operating	2000 m/70 kPa
MTBF	MIL-217-F	MRD-405	1,978,000 hours
Service life		Operating	10 year
Dimension W x H x D			31 x 103 x 103 mm
Weight			0.25 kg
Degree of protection	IEC 529	Enclosure	IP40
Cooling			Convection
Mounting			Vertical on 35 mm DIN-rail

<sup>\*</sup>crit A = no effect, crit B = restart without user intervention

### **Description**

Remote access removes boundaries, eliminates the need for time consuming site visits and provides a network infrastructure suitable for today's "always-on" society. The MRD-405 industrial M2M/4G gateway/ router uses the Internet to cost effectively interconnect systems, allowing HMI, PLCs, sensors etc to communicate with each other.

A compact case design with a power input range between 10 to 36 VDC make the unit well suited for industrial applications. Easy integration with other devices is achieved using the built-in two port Ethernet switch.

The stability of mobile connections can be affected by various different parameters and in order to ensure constant connectivity the MRD-series features a connection manager.



The MRD-405 offers network protection from malicious eavesdroppers via encrypted communication tunnels (VPN), and features a simple, yet powerful, packet inspection firewall.

The requirements and needs vary between different types of M2M applications. Sometimes all that is needed is a reliable gateway to the internet as all the intelligence may be located in other devices in the system. Whereas other applications might have simpler devices that need to be securely connected to each other, or a server, via a VPN. Regardless of which type of M2M application you might have the MRD-405 from Westermo can fulfill your communication needs. The unit works very well with any type of SIM card, such as static IP SIM, M2M SIM, or an off-the-shelf SIM in both packet mode or circuit switched data (CSD) mode.

Configuring the unit is very easy with the built-in web-interface, no need for special AT-commands or similar. The device can also provide both management and monitoring via SMS, for example an SMS could be sent to start a VPN.

### Interface specifications

Power					
Rated voltage	12 – 24 VDC	12 – 24 VDC			
Operating voltage	10 – 36 VDC				
Start-up current (max)	400 mA				
Rated frequency	DC				
Consumption guidance*	Voltage	Mode	Consi	umption	
	24 VDC	Not registered	44 mA	1.056 W	
	24 VDC	GSM and UMTS registered	50 mA	1.2 W	
	24 VDC	GSM XMIT average	69 mA	1.656 W	
	24 VDC	GSM XMIT peak	110 mA	2.64 W	
	24 VDC	UMTS XMIT average	68 mA	1.632 W	
	24 VDC	UMTS XMIT peak	68 mA	1.635 W	
	24 VDC	UMTS/LTE Idle	86 mA	2.064 W	
	24 VDC	UMTS/LTE Avarage send/	98 mA	2.352 W	
		receive			
	24 VDC	UMTS/LTE Max send/	110 mA	2.64 W	
		receive			

<sup>\*</sup> For example purpose only. A lot of factors that affect the power consumption, such as signal strength. Example measurement was carried out in-doors in a 25°C room with "normal" signal strength.


Ethernet TX	
Electrical specification	IEEE std 802.3. 2005 Edition
Data rate	10 Mbit/s, 100 Mbit/s, manual or auto
Duplex	Full or half, manual or auto
Circuit type	SELV
Transmission range	100 m/328 ft
Isolation to	All other
Connection	RJ-45 auto MDI/MDIX
Shielded cable	Not required, except when installed in Railway applications as signalling and telecommunications apparatus and located close to rails.*
Conductive housing	Yes
Number of ports	2

<sup>\*</sup> To minimise the risk of interference, a shielded cable is recommended when the cable is located inside 3 m boundary to the rails and connected to this port. The cable shield should be properly connected (360°) to an earthing point within 1 m from this port. This earthing point should have a low impedance connection to the conductive enclosure of the apparatus cabinet, or similar, where the unit is built-in. This conductive enclosure should be connected to the earthing system of an installation and may be directly connected to the protective earth.

SIM			
Electrical specification	3 volts SIM supported		
Number of slots	1		

Antenna					
Mobile/	Max	Connectivity Sp	Fre	equency (MHz)	
Cellular Technology	Downlink	Uplink	Note		
GSM	14.4 kbit/s	14.4 kbit/s	_		900/1800
GPRS	85.6 kbit/s	85.6 kbit/s	Class 12		
EDGE	236.8 kbit/s	236.8 kbit/s	Class 12		
3G UMTS	384 kbit/s	384 kbit/s	_	850/900/2100	
HSDPA	7.2 Mbit/s	-	Cat 8		
HSUPA	_	5.7 Mbit/s	Cat 6		
4G LTE	10 Mbit/s	5 Mbit/s	Cat 1	800(B20)/1800(B3)/2600(B7	
Antennas	Transmit	Receive (RX)	Required	Label	Connector
	(TX)				
Main Antenna	YES	YES	YES	MAIN	SMA

### **Connections MRD-405**

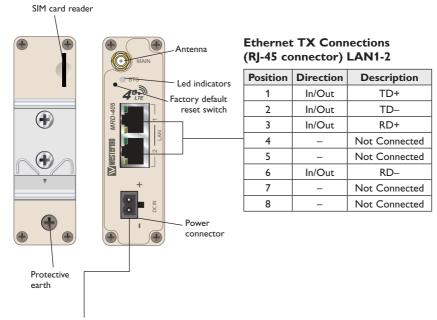

### **Power connector**

	2-position	Product marking	Direction	Description
1——————————————————————————————————————	No. 1	+	Input	Supply voltage input DC
•	No. 2	-	Input	Common

### **LED Indicators**

LED	State	Status	Description
STS	Startup/POST	NOT LIT	Power issue
		RED	Normal
	Running/Normal	RED FLASH	Cannot connect to wireless network
		GREEN	Everything OK

### Status Indicator

The status indicator reports the health of the unit. In normal operation, the indicator will be GREEN, if a fault is detected either at boot-up or during normal operation the indicator will light RED, or flash RED. When the unit is first switched on or is reset, the indicator will first light RED, this is normal behavior during boot-up and does not indicate a fault. If the indicator does not light up when power is applied check the power supply voltage and connections.

### **Factory Default Reset Switch**

The reset switch is used to restore the configuration of the MRD to factory default settings. The switch is accessed through a small hole on the front of the unit, next to the STS LFD.

### To reset the configuration:

- · Power down the unit.
- Use a suitable tool and depress the reset switch.
- Power up the unit ensuring the switch remains depressed for approximately 10 seconds after power is applied. The STS LED will flash twice to indicate a reset.
- The router will now re-boot as normal with the factory default settings.

**Note:** Using the Factory Default Reset Switch will erase all existing configuration settings and restore the factory default settings. This includes the network connection profile settings APN, user name and password.

## **Protocols and Functionality MRD-405**

Ethernet Technologies	IEEE 802.3 for 10BaseT
	IEEE 802.3u for 100BaseTX
Cellular Technologies	Circuit Switched Data mode (CSD) GSM GPRS Multi-slot class 12, mobile station class B, PBCCH support, coding schemes CS 1-4 EDGE Multi-slot class 12 (max 236.8 kbit/s), mobile station class B, modulation and coding scheme MCS 1-9 3G (WCDMA/UMTSt) 384 kbit/s downlink/uplink HSUPA up to 5.7 Mbit/s uplink HSDPA up to 7.2 Mbit/s downlink
	4G LTE up to 10 Mbit/s downlink
1 200	4G LTE up to 5 Mbit/s uplink
Layer-2 QoS	IEEE 802.1p Class of Service
IP Routing, Firewall, VPN and Cyber Security	Static IP routing Stateful inspection Firewall/ACL, NAT, Port Forwarding 1 x IPsec VPN, PSK & X.509 1 x OpenVPN/SSL VPN client 1 x WeConnect RADIUS PPP Dial in/Dial out
Manageability	Management tools  • Web interface (HTTP and HTTPS)  • Command Line Interface (CLI) via SSHv2 and TELNET  • SNMPv1/v2c/v3  • SMS Control  Flexible alarm/event handling system  Syslog (log files and remote syslog server)  SNTP (NTP client)  DHCP client  DHCP server  DDNS (Dynamic DNS update client)

For more information, please refer to the Reference Guide on the product website.

### **Getting started**

### Installing the SIM Card

Insert the SIM card into the SIM card reader with the contacts facing up.

**Note:** Before removing or inserting the SIM card, ensure that the power has been turned off and the power connector has been removed from the MRD.



### Connecting the Antenna(s)

The unit has one antenna connector (SMA). Please ensure that the connecting nut is done up tightly in order to make a good connection.

### **Connect the Power Supply**

Connect the Power Supply The MRD requires a DC power source in the voltage range of 10 to 36 VDC. The unit is designed to self protect from permanent damage if the voltage exceeds 36 VDC or if reverse polarity is applied. The router may need to be returned for service if this occurs. The router can also be damaged if there is any potential difference between the chassis ground, power (–) input, or antenna shield. Before connecting any wiring, ensure all components are earthed to a common ground point. An external isolator will be required if a positive earth power supply is used.

### **Ethernet**



The Ethernet ports are on the front of the unit and are marked LAN 1 and LAN 2, each port has a LED indicating the connection speed and a LED indicating activity as shown in figure below. Both ports are capable of autonegotiation, meaning cross-over cables are not required. The Ethernet ports are switched, allowing more than one Ethernet device to be connected to the unit at one time.

Connection speed LED

Activity LED

### **Configuration**

### Accessing and Using the Web Interface

All configuration of the MRD can be done via the web interface. In order to view the web pages a computer with a fixed IP address, on the same sub-net as the MRD, will need to be connected to one of the LAN ports.

The default IP settings of the MRD are:

IP Address: 192.168.2.200Netmask: 255.255.255.0

The recommended IP settings for the PC used to configure the MRD Router:

IP Address: 192.168.2.100
Netmask: 255.255.255.0
Default Gateway: 192.168.2.200
Primary DNS: 192.168.2.200

Note: Although it is possible to connect the MRD directly to a Local Area Network (LAN) it is recommend that the network configuration as described in this section is performed prior to doing so. The DHCP server of the unit is by default disabled.

### Windows PC Network Settings


The following describes how to configure the network settings of a PC with Windows 7 so that it can access the MRD.

**Note:** This procedure will change the network settings of the Windows PC, if the PC is connected to a network the connection should be removed before performing the changes. To restore the network, settings of the PC record the current settings at Step 7 in the following procedure, then when the MRD has been configured, follow the procedure again and use the recorded values at Step 7.

- 1. Open the Control Panel by selecting Start > Control Panel.
- 2. Click the Network and Sharing Center icon.
- 3. Click Change Adapter Settings.
- 4. Double click the Network icon.
- The Local Area Connection Status dialog box will be displayed, click the Properties button.
- The Local Area Connection Properties dialog box, as shown in Figure 1, will be displayed

Click on Internet Protocol (TCP/IPv4) to highlight it and then click the Properties button.

Figure 1

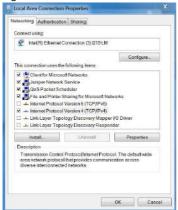

7. The Internet Protocol (TCP/IP)Properties dialog box, change the settings to match those shown in Figure 2, and then click "OK.

Figure 2



**Note:** If a web browser was open prior to making the network changes, then it will need to be closed and re-started before attempting to connect to the MRD.

### Accessing the MRD

- Open a web browser on the PC and browse to http://192.168.2.200 (the default MRD, IP address) .
- A login box will popup. If the box fails to display, re-check the cable connections to the unit and the IP address settings of the PC.

Enter the following login details:

User Name: admin
Password: westermo

• The Status summary page will be displayed, it will be similar to Figure 3.



**Note:** If the unit is not yet configured it is likely that the Network Status and Connection Status will indicate a fault condition. This is normal.


### **Basic Configuration**

The three sections below detail the steps needed to configure the MRD for basic packet mode functionality. For details on how to configure the unit for Circuit Switched mode and for more advanced configuration refer to the Advanced Configuration section of the Reference Guide.

### Configure the Wireless interface

To access the configuration page for the Wireless interface, click on Wireless. The Basic Wireless configuration page will be displayed as shown in Figure 4.

Figure 4

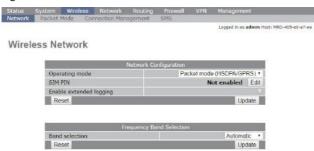

### **Network Configuration**

The "Network Configuration" section contains the settings for the operational mode and the frequency band of the unit, the default settings will usually be adequate to connect the MRD to a packet based network.

### Setting the SIM card PIN

The SIM card may have a PIN associated with it and may require the PIN to be entered before the unit can access the SIM. To set the SIM PIN click Edit. A dialogue box as shown in Figure 5 will be displayed.

Figure 5




Set the box marked "Enable" and enter the PIN in the "PIN" and "Confirm PIN" entry boxes. Then click the "Update" button to save the PIN.

### Adding a Network Connection Profile

To access the wireless packet mode settings click on the "Packet mode" tab. The screen shown in Figure 6 will be displayed. The page shows the connection configuration details and is divided into two sections. The first section shows the current connection state for the selected profile. The second section lists the available profiles. A connection profile contains the settings required to connect to a provider's network. The unit allows multiple profiles to be configured to allow quick changes to the network connection settings. For most applications only one profile is required.

Figure 6

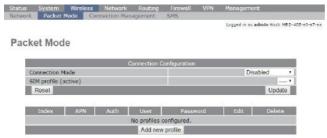

The network provider will provide the items listed below which should be entered into the appropriate fields in the "Add new profile" section as shown in Figure 7.

- APN (Access Point Name)
- Authentication (None/PAP/CHAP)
- Username
- Password

Figure 7



Note: In order to set a password click the check-box marked New. The password can now be entered in the text field. The password is visible as it is being typed so that it can be checked for errors prior to being set. Once set the password will no longer be visible.

**Note:** The provider may not supply a username and password if network authentication is not required. In this case set the Authentication to "None", leave the username blank and do not set a password.

Once the data has been entered click the "Update" button to add the profile. The screen will now change to show the added profile. As this is the only profile entered it will be automatically selected as the current profile and the profile entry will be shaded green to indicate that it is the selected profile.

#### **Enable the Wireless Connection**

To complete the configuration of the wireless connection, set the "Connection state" to "Always connect" and click the "Update" button to save the changes. Once the changes have been set, the MRD will initiate a connection. Normally it will take up to 30 seconds to esablish a connection. Figure 8 shows the completed wireless configuration.


Figure 8



### **Checking the Status of the Connection**

To check the status of the connection select "Status" from the top level menu and then select "Wireless" from the second level menu. The Wireless status page will be displayed which will look similar to the one shown in Figure 9. The status of the connection will change as the router connects to the network, first it will report "Checking" then "Connecting" and finally "Connected". To see the value changing the page will need to be reloaded.

Figure 9

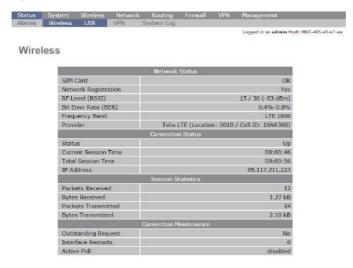

### Configure the LAN interface and DHCP Server

To access the configuration page for the LAN interface and DHCP Server, select "Interfaces" from the top level menu. A LAN interface screen similar to the one shown in Figure 10 will be displayed.

Figure 10



### Setting the IP Address

If it is desired to change the IP address of the LAN port, follow the steps below:

- Enter the new IP address and netmask in the "Interface Configuration table".
- Click Update to set the changes. Once the changes have been set, the IP address of the MRD will change. Enter the new address in the browser on the PC. It will be necessary to login again, following the procedure described in the previous section.

### **Enabling DHCP**

The DHCP server allows clients on the local network to be automatically allocated IP addresses from the MRD. The unit will also provide the clients with network settings like their default route and DNS servers. By default the DHCP server is disabled but if enabled it will be configured to serve IP addresses in the range 192.168.2.210 through 192.168.2.240, and the Default and Maximum lease times have been set to 1440 minutes. So if these values are consistent with the network that the MRD is connected to, then the DHCP can be enabled by setting the Enabled field to Yes and clicking the Update button.


If the standard settings are not applicable for the connected network, then refer to Figure 10 and follow the steps below, to configure the DHCP server:

Choose a group of available IP addresses on the local network. For example, if the IP address of the MRD is 192.168.2.200 with a netmask of 255.255.255.0, a group chosen could be'192.168.2.100 to 192.168.2.150. This will provide 51 addresses for clients.

Under the "DHCP Server Configuration table":

- · Check the "Enabled box".
- Enter the first address of the group in the "Start Address box".
- Enter the last address of the group in the "End Address box".
- Enter a lease time for the "Default Lease time".
- · Enter a lease time for the "Maximum Lease time".
- · Click "Update" to set the changes.

Figure 11

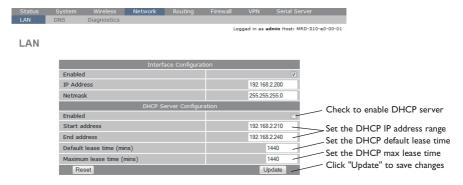

### Configure clients to use the MRD as their gateway

The MRD will act as a gateway for connections destined over the wireless interface. The default configuration will provide Network Address Translation and firewalling to protect clients on the local network.


To configure clients to use the MRD as their gateway:

- If the clients have a DHCP address allocated by the MRD, they will have learned the necessary settings. No further configuration is needed.
- If clients have static IP addresses, set their default route and DNS server to the IP address of the MRD.

## **Mounting**

The MRD-405 should be mounted on 35 mm DIN-rail, which is horizontally mounted inside an apparatus cabinet or similar. Snap on mounting, see figure.

Mount the MRD-405 with the integrated DIN-clip:

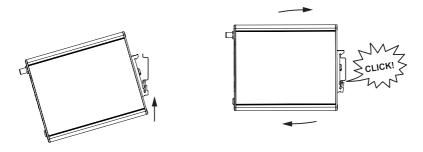


### **Earth connection**

For correct function, the ground connection on the unit needs to be properly connected to a solid ground. See figure.




### Cooling

The router should be mounted in a clean and dry location, protected from water, excessive dust, corrosive fumes, extremes of temperature and direct sunlight. Allow sufficient ventilation to ensure adequate cooling of the router.

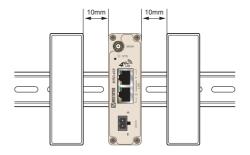

### **Dimensions MRD-405**

Measurements are stated in millimeters.

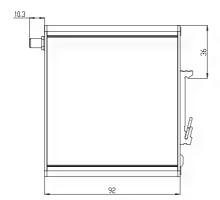







6623-2212 27



Westermo • SE-640 40 Stora Sundby, Sweden Tel +46 16 42 80 00 Fax +46 16 42 80 01 E-mail: info@westermo.com www.westermo.com

## Sales Units Westermo Data Communications

#### China

sales.cn@westermo.com www.cn.westermo.com

#### **France**

infos@westermo.fr www.westermo.fr

### Germany

info@westermo.de www.westermo.de

### North America

info@westermo.com www.westermo.com

#### **Singapore**

sales@westermo.com.sg www.westermo.com

### Sweden

info.sverige@westermo.se www.westermo.se

### United Kingdom

sales@westermo.co.uk www.westermo.co.uk

### **Other Offices**



For complete contact information, please visit our website at www.westermo.com/contact or scan the QR code